




Installation Guide

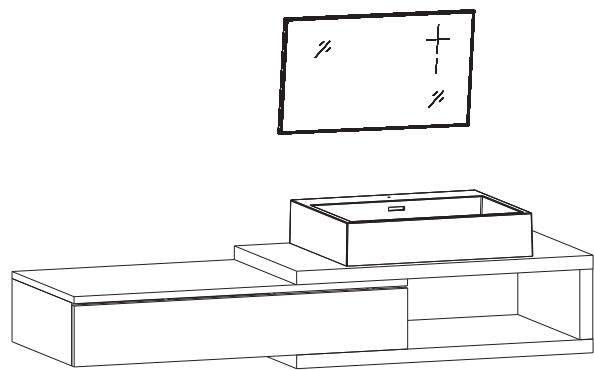


3

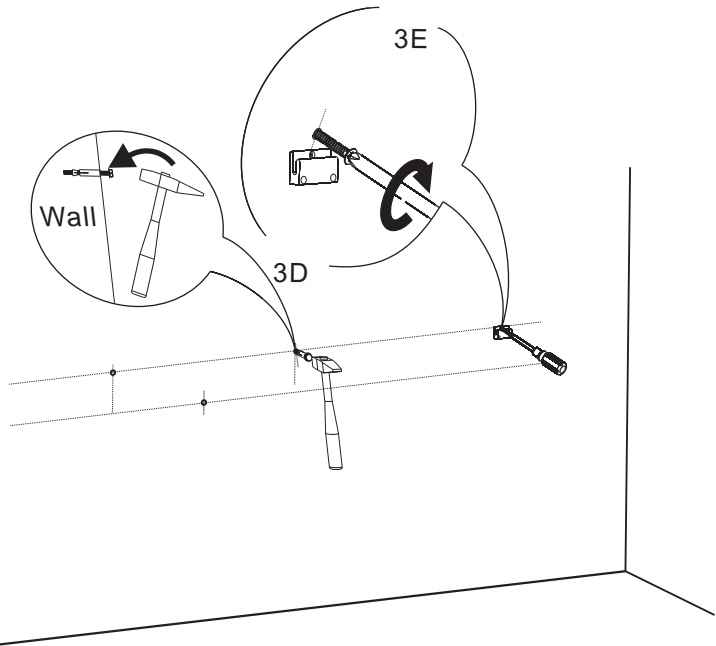


6

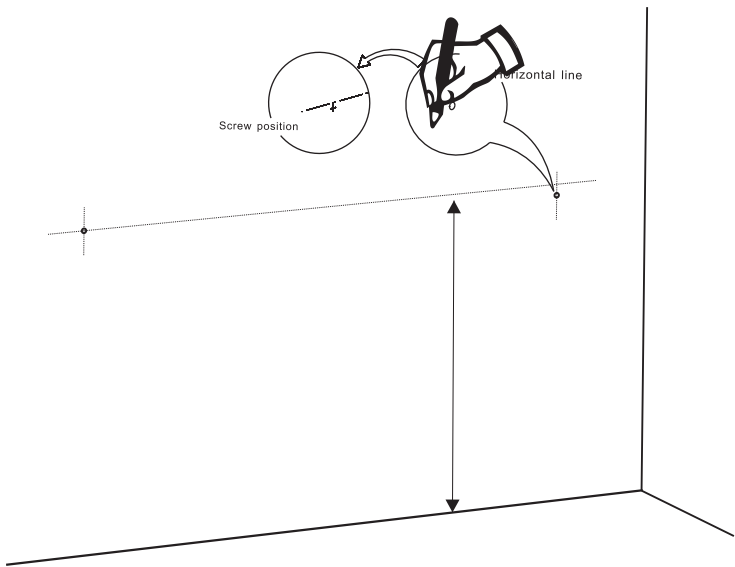


4

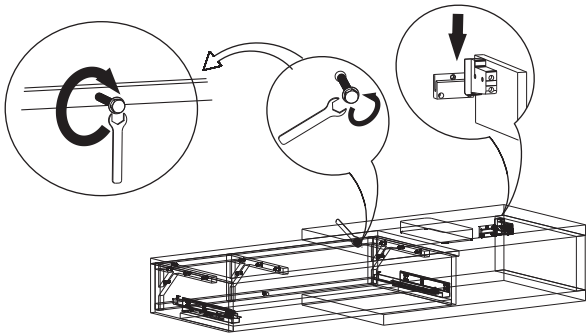


7

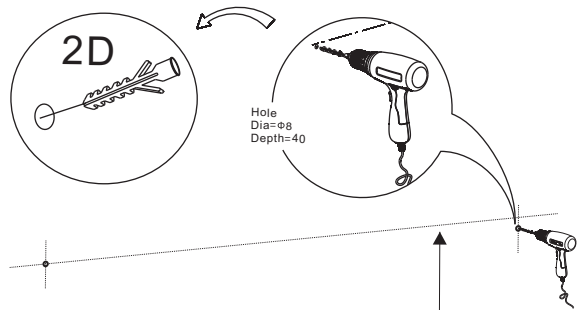

5

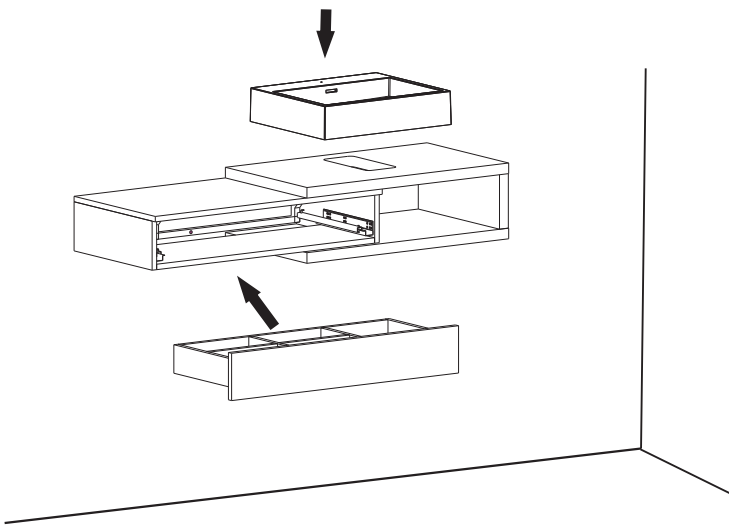


8

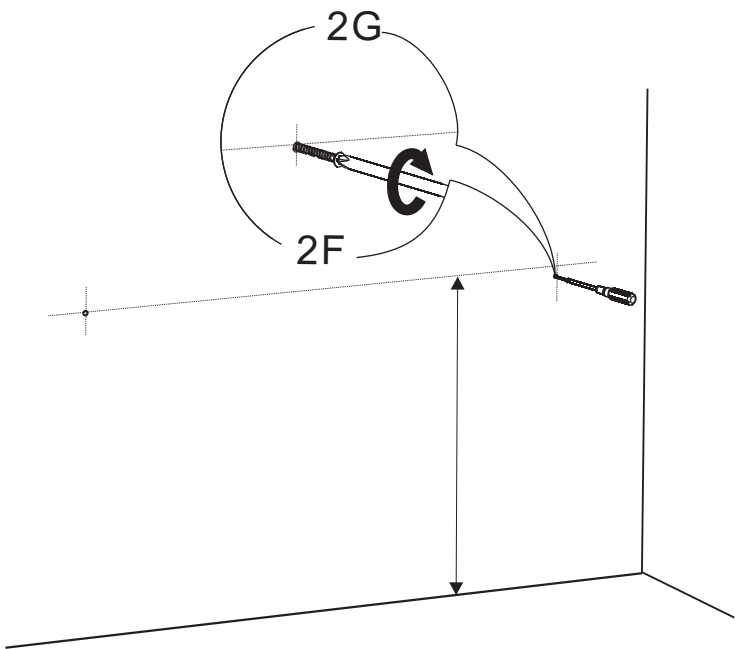


1

CABINET

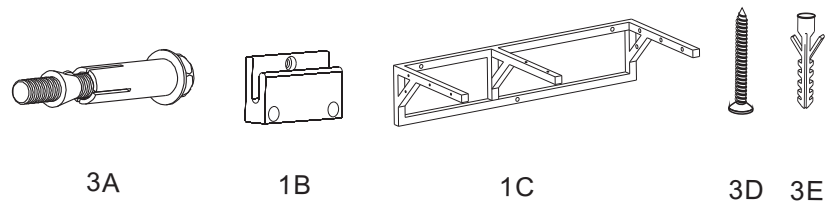


2

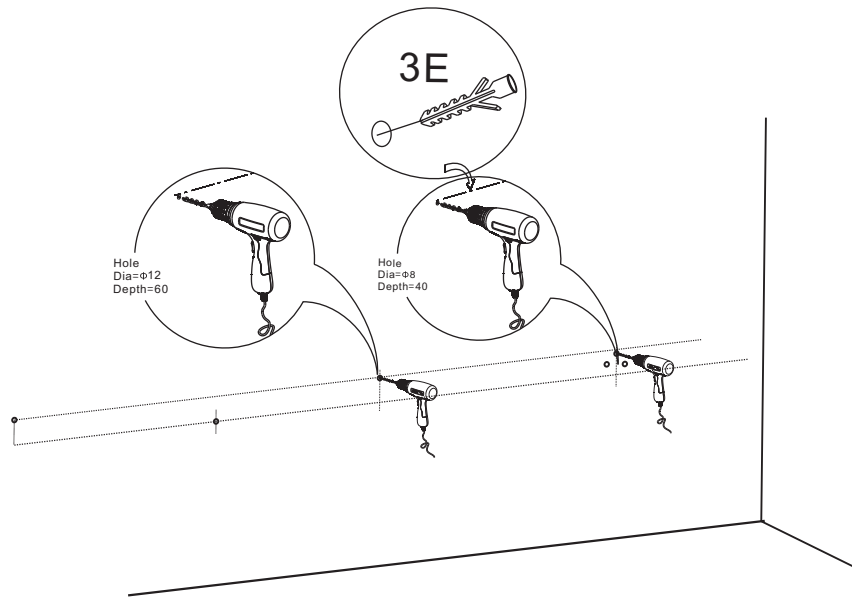

MIRROR




2F




2G


9

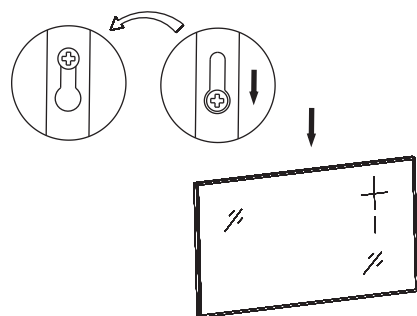


Installation Guide

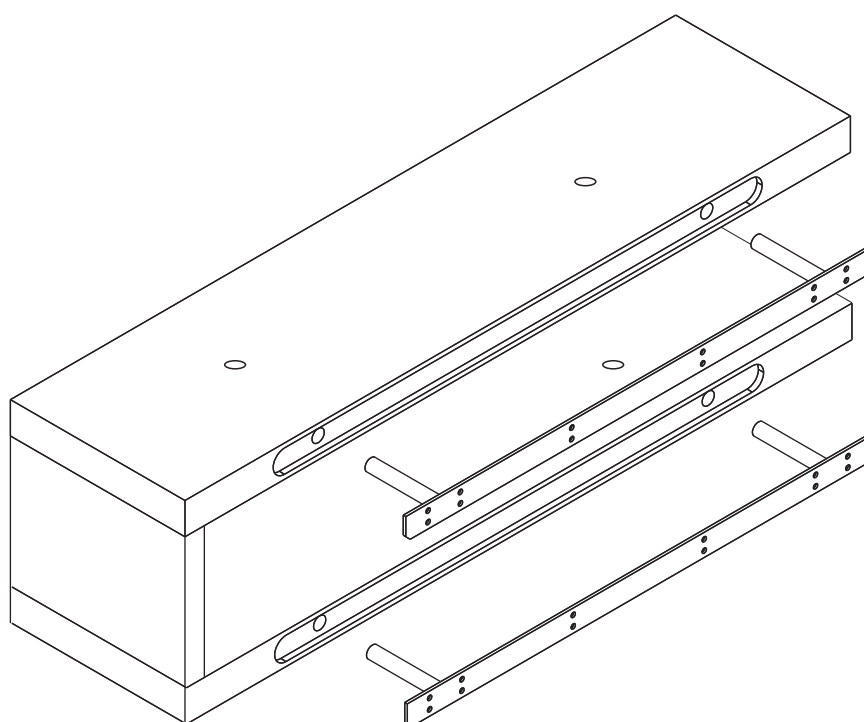

Electric drill




Drill bit
($\Phi 8$)



Tape measure
(3m~5m)




Pencil

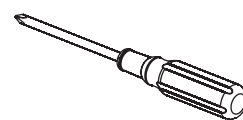


Screwdriver

Tools required for installation


HARDWARE FITTINGS

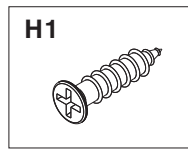


4xØ4x14

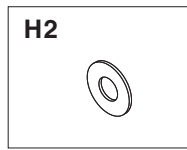

4xØ8

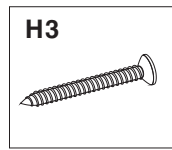


12xØ4x50

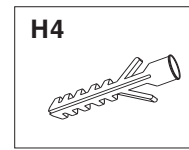


12x


1

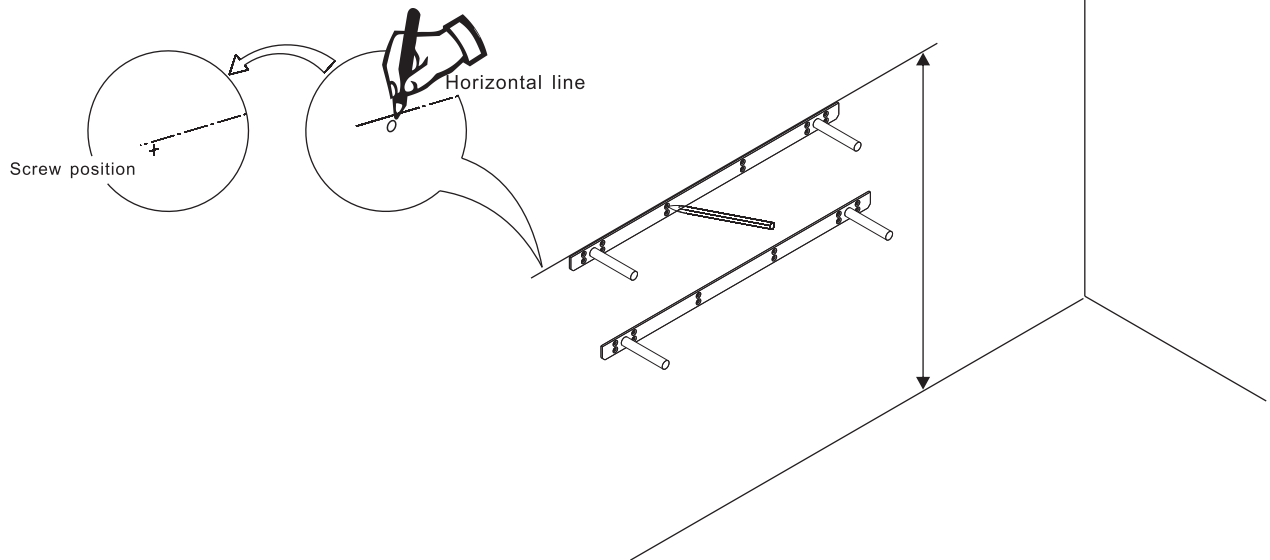

2

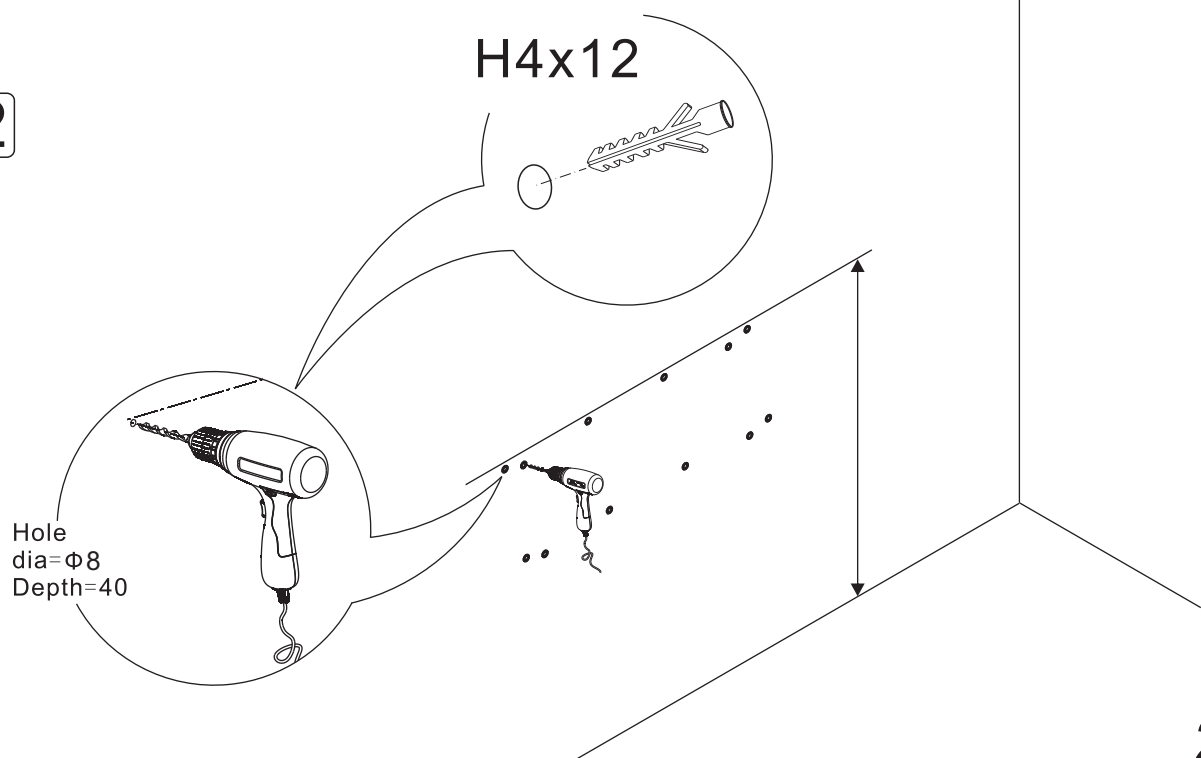

3

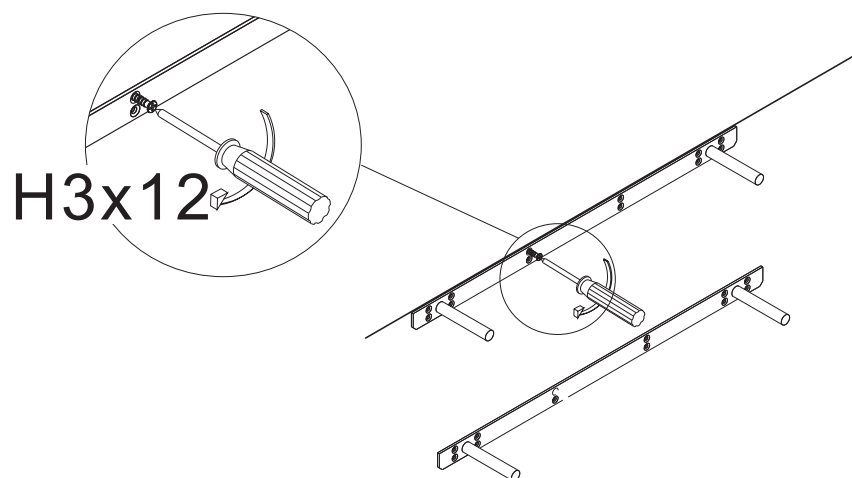

4

