


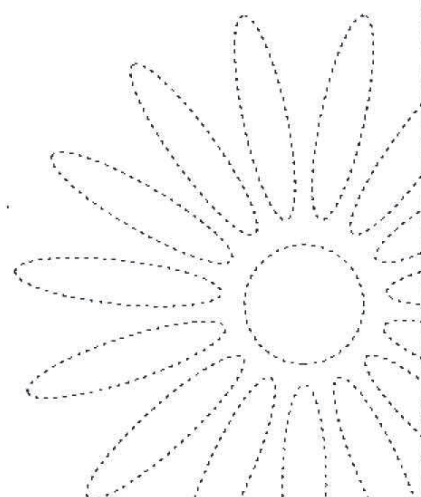

Installation Guide






Electric drill



Drill bit
($\Phi 6$)

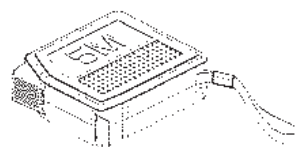


Tape measure
(3m~5m)



Silicone




Pencil

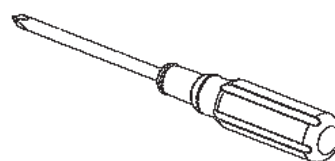

Screwdriver

Tools required for installation


MIRROR



6B




6C

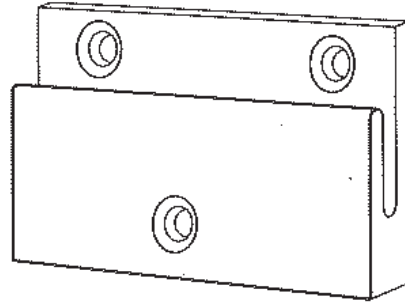


2D

1

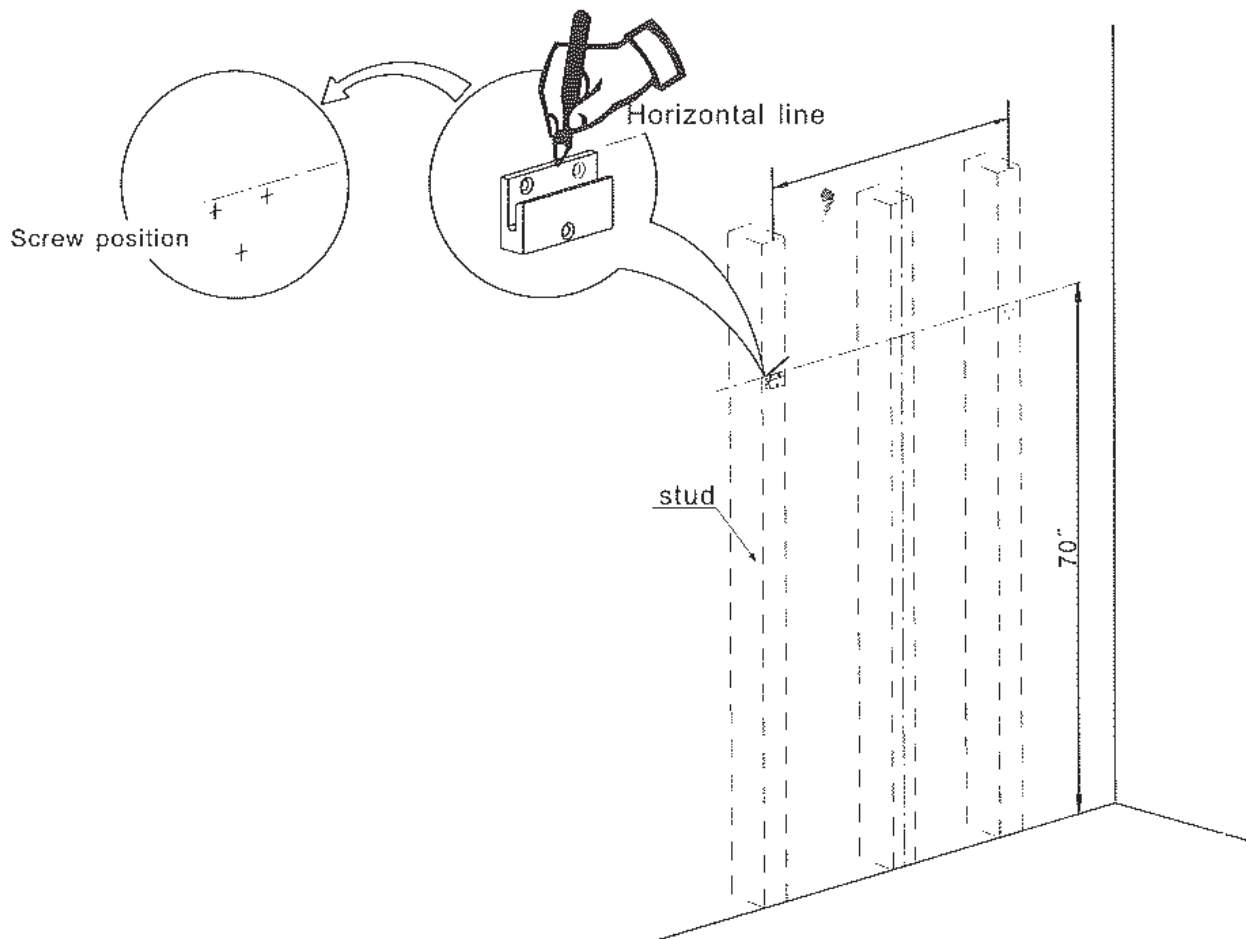


2

Hole
dia=Φ6
Depth=40

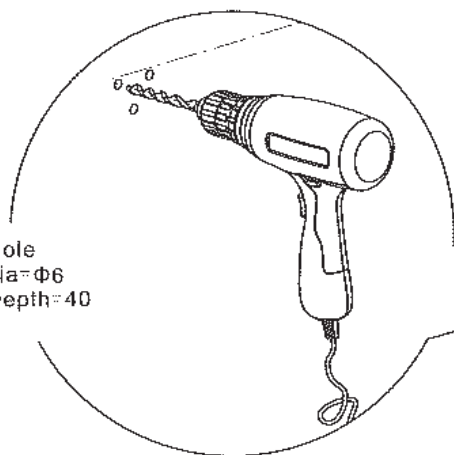


stud

70"

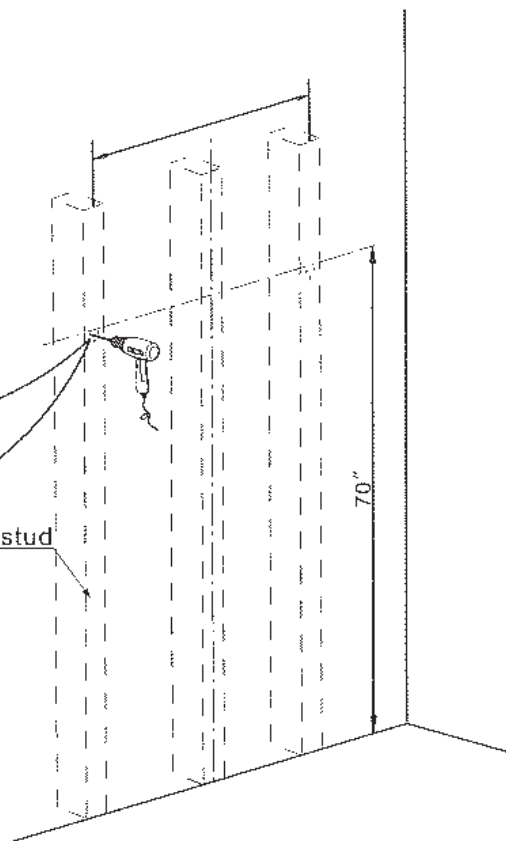


3

6C

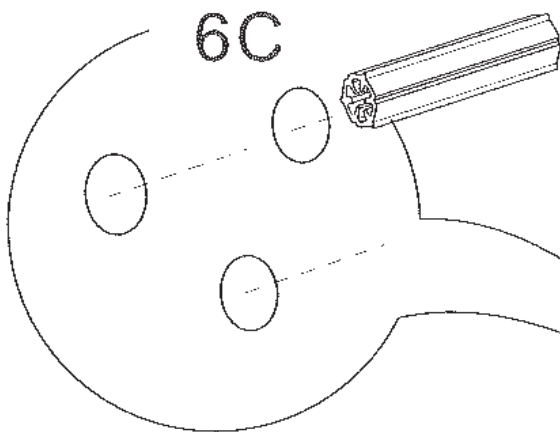


stud


70"

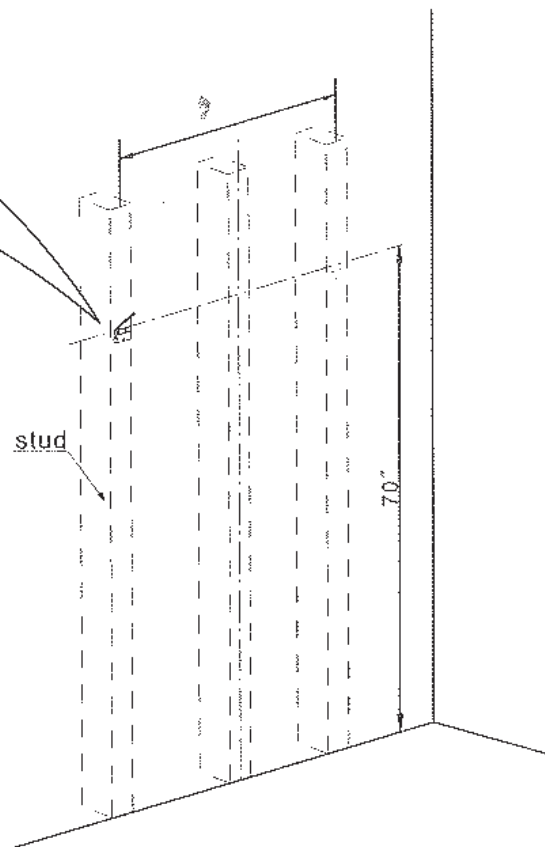

4

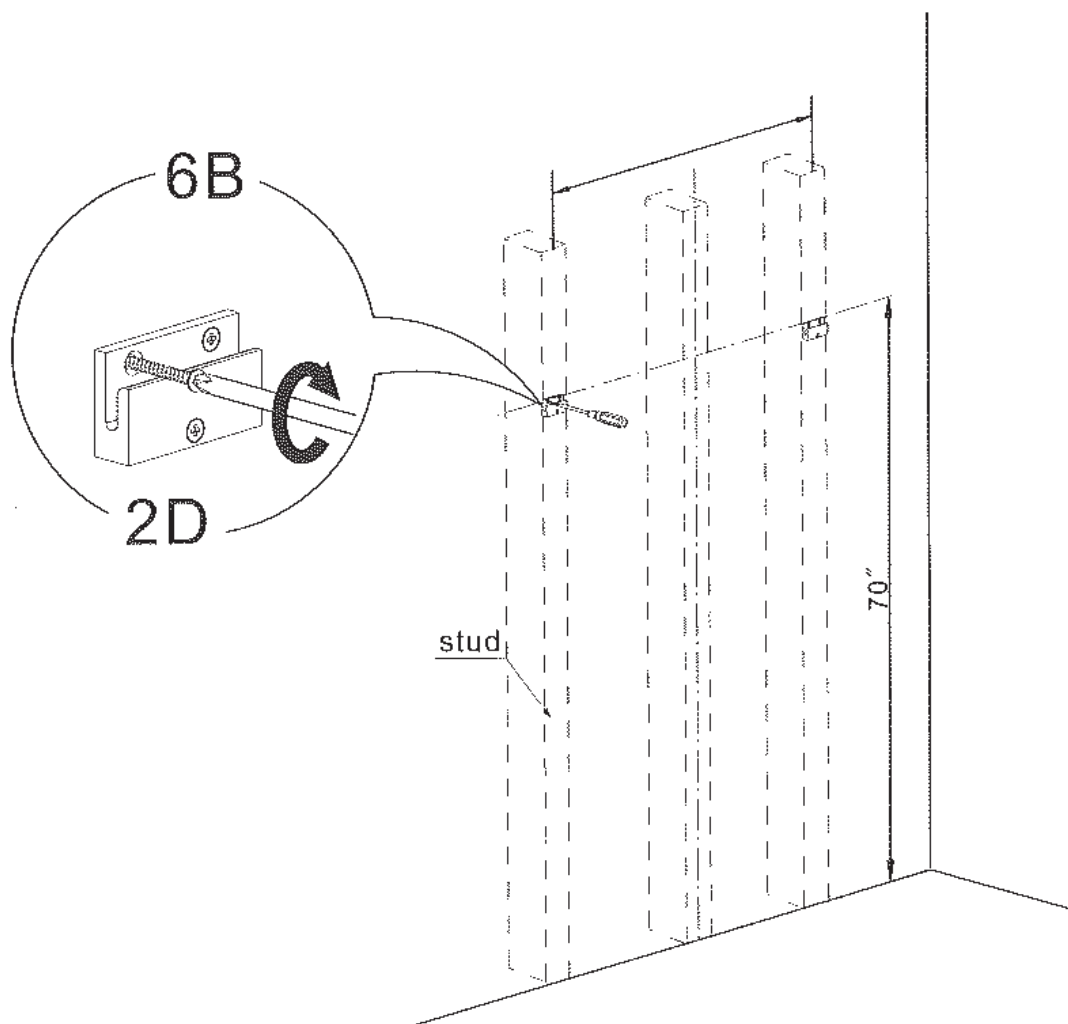

5

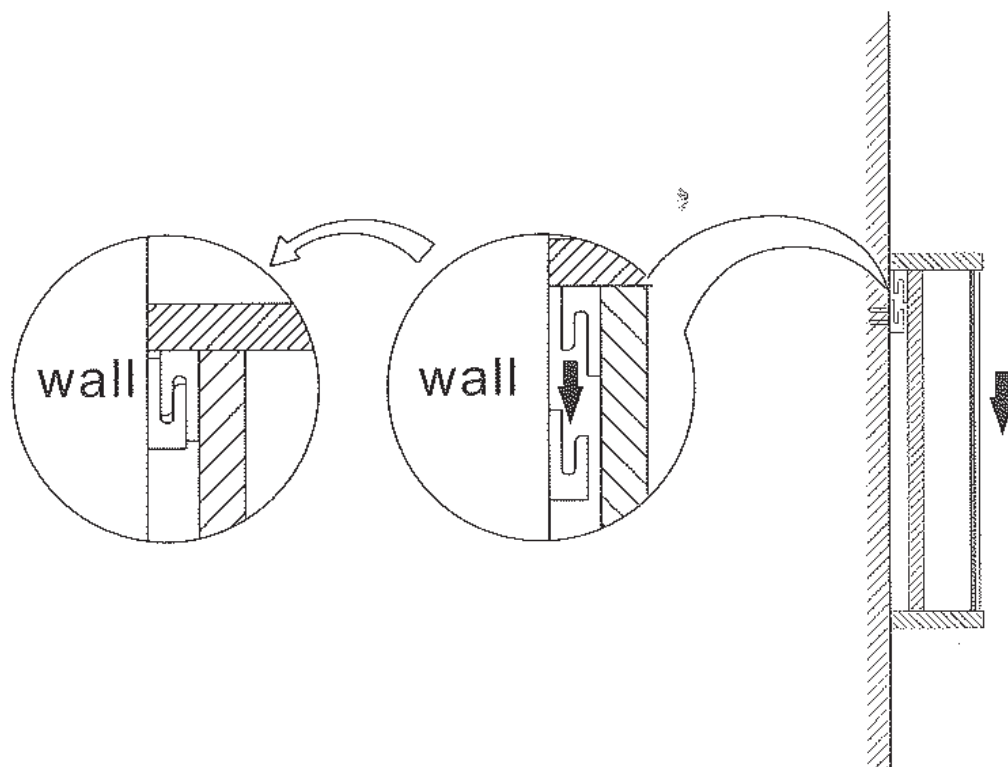


CABINET



6B




6C

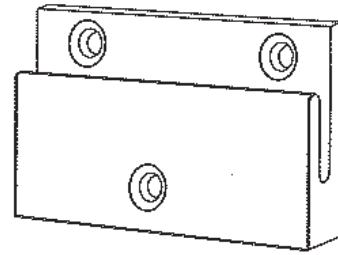


2D

1

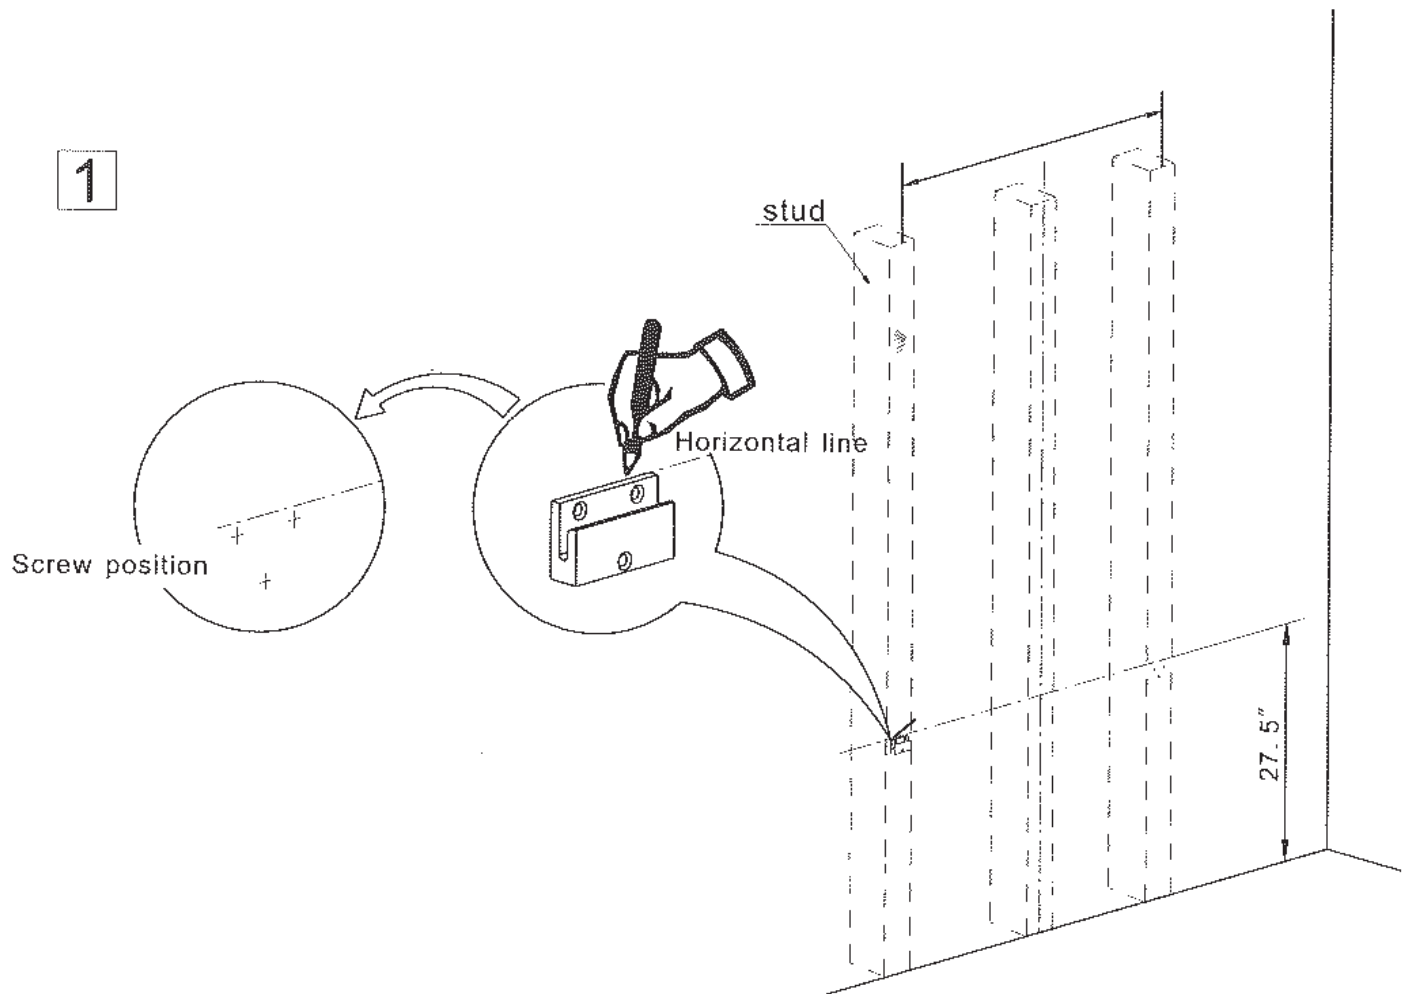

2

Hole
dia=Φ6
Depth=40

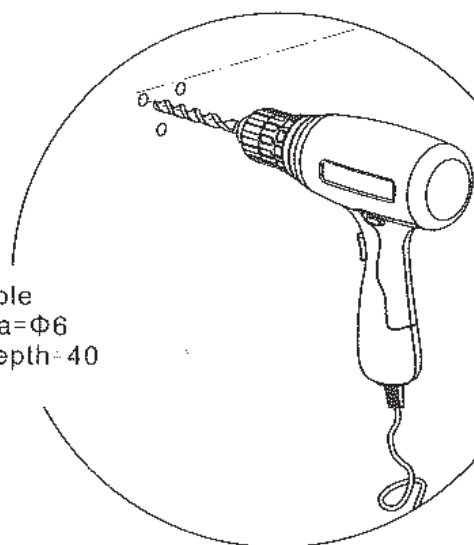


stud

27.5"

3

6B


2D

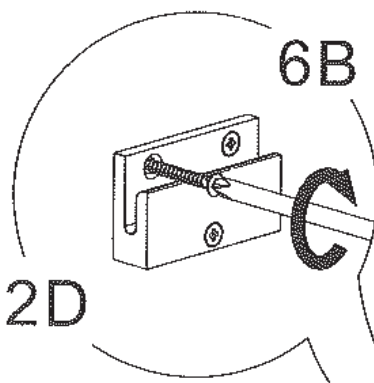


stud

27.5"


4

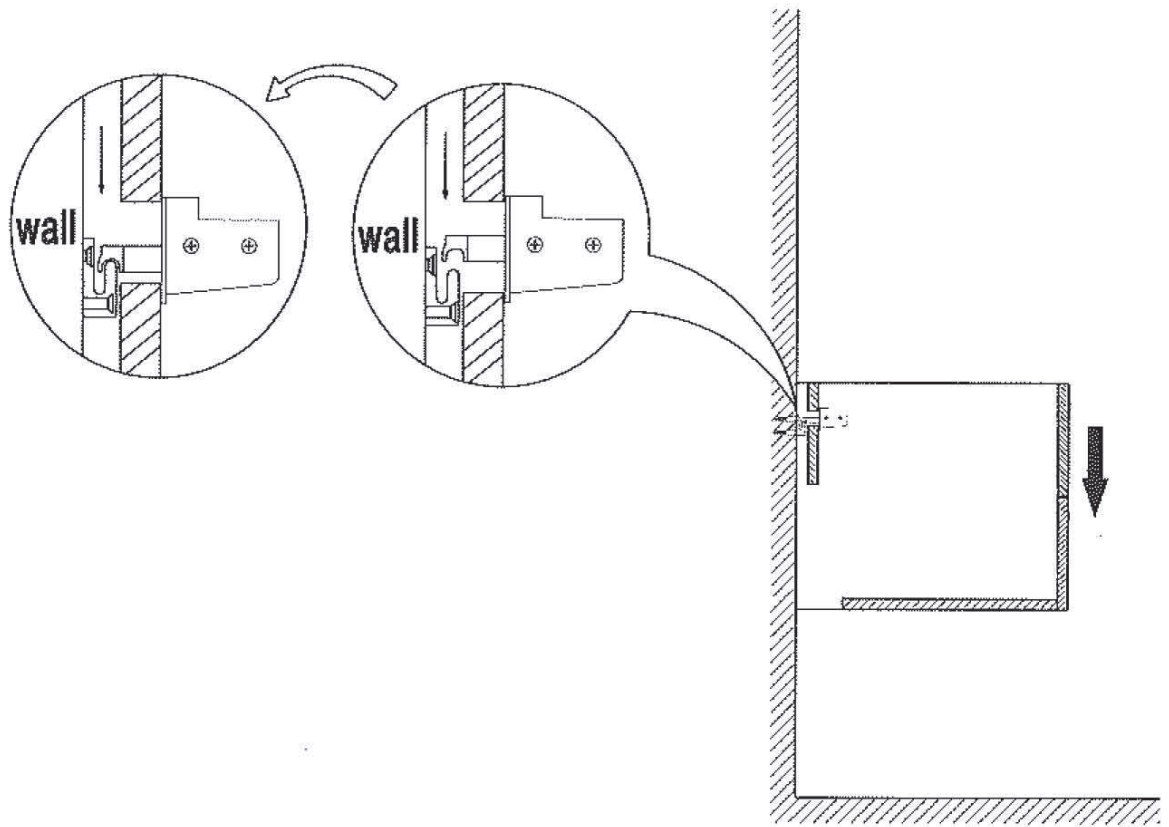


5

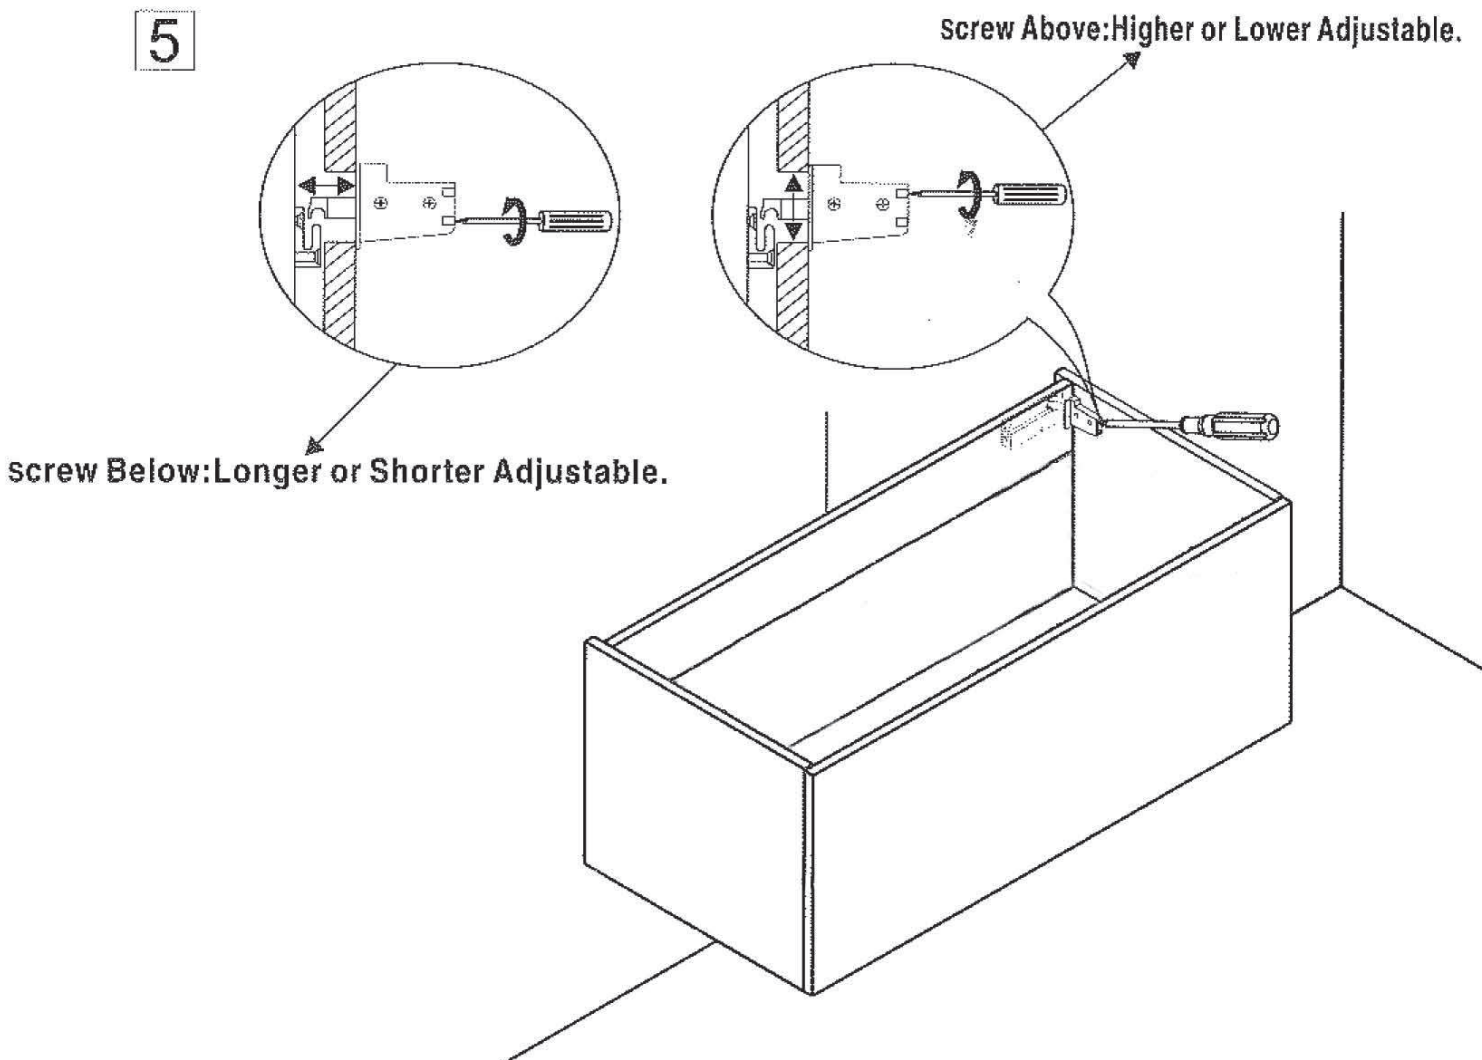

6

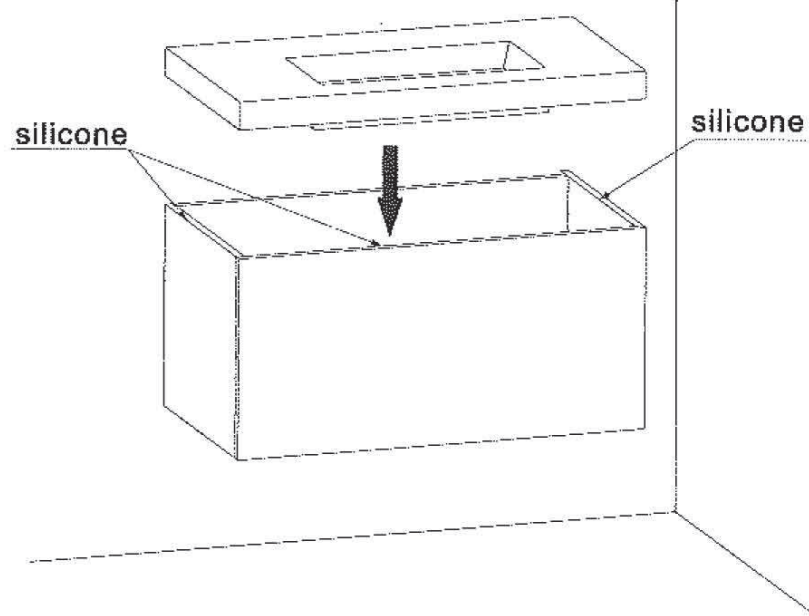



7

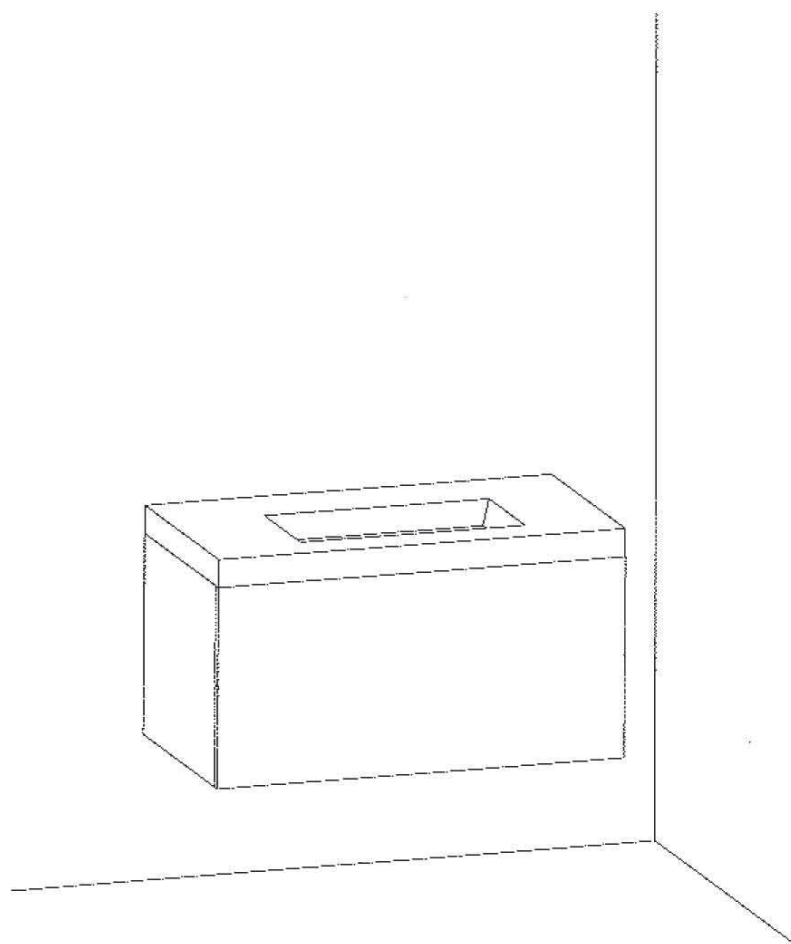

STORAGE

(Select)

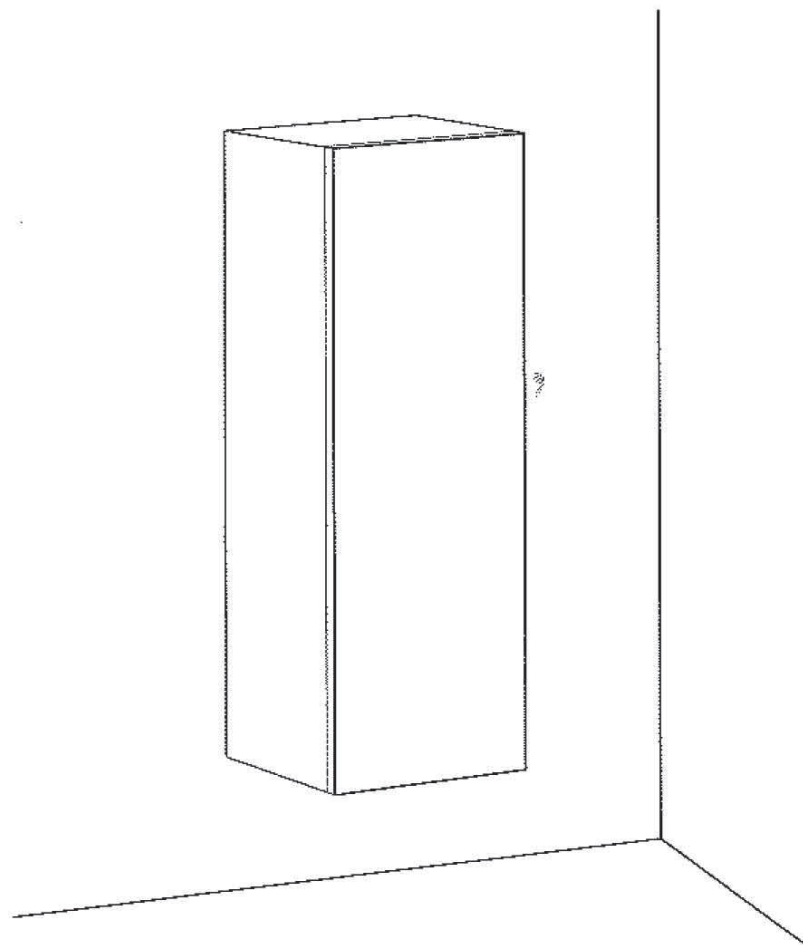

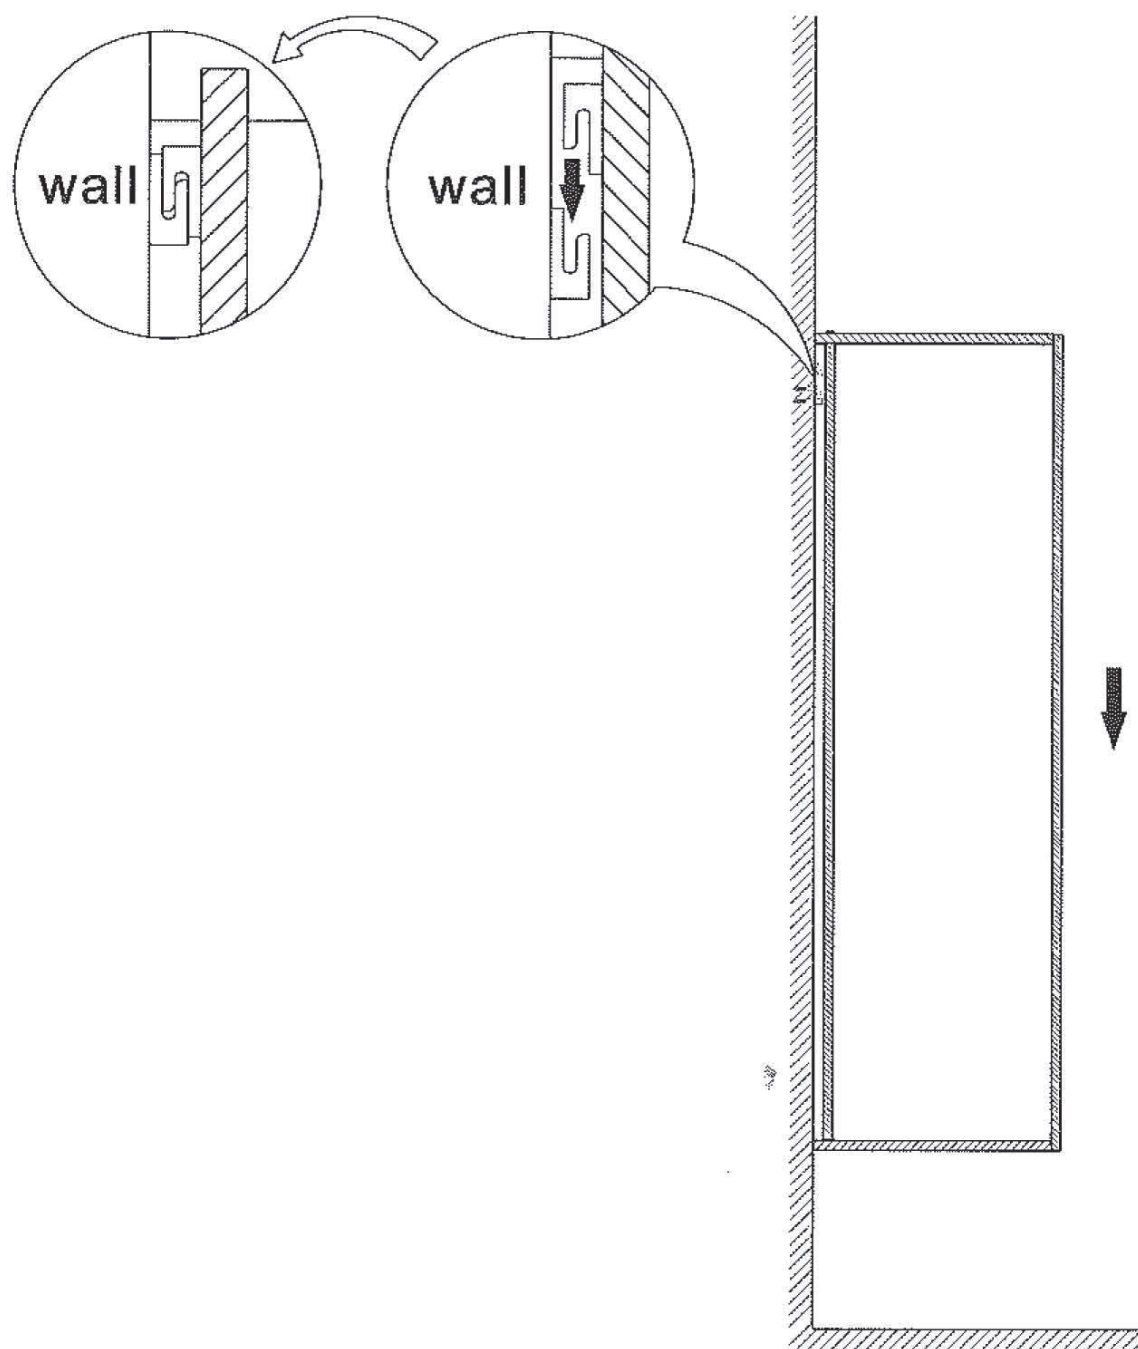

Remark:if there is logical adjustment.
It will not be another notify.